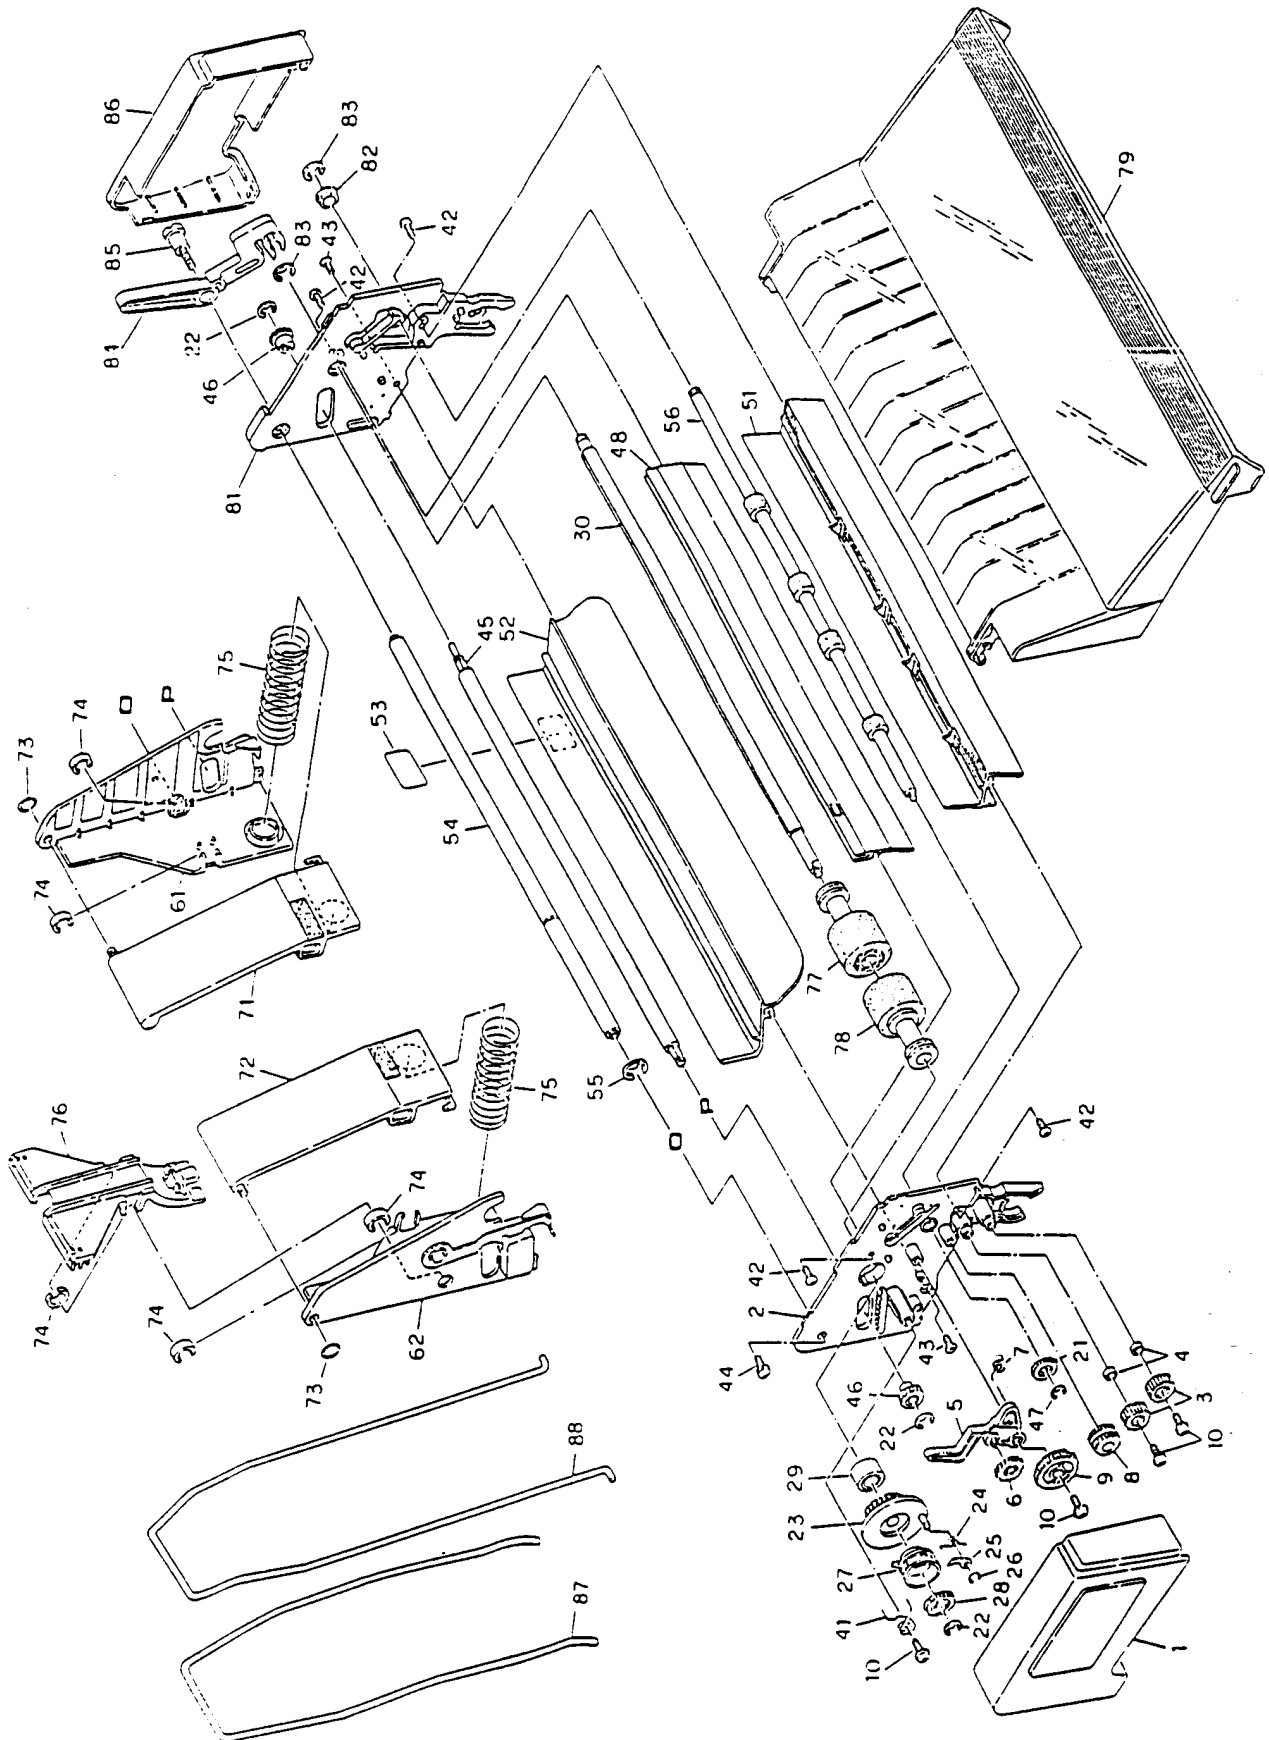

ERSATZTEILLISTE
EINZELBLATTEINZUG (CSF)
FÜR ML 380

SPARE PARTS LIST
CUT SHEET FEEDER
FOR ML 380

ZEICHNUNG 1 - EINZELBLATTEINZUG (FIGURE 1 - CSF)



LISTE 1 - EINZELBLATTEINZUG (TABLE 1 - CSF)

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
1	SIDE COVER (L)	4PB4043-3866P1
2	SET PLATE (L)	4PB4043-3867P1
3	GEAR (G1, G2)	4PB4043-3868P1
4	COLLAR	4PB4043-3869P1
5	PARKING LEVER	4PB4043-3870P1
6	GEAR (G5)	4PB4043-3871P1
7	SPRING	4PB4043-3872P1
8	GEAR (G3)	4PB4043-3873P1
9	GEAR (G4)	4PB4043-3874P1
10	TAPPING SCREW	4PB4043-3875P1
21	GEAR (G6)	4PB4043-3876P1
22	E-CLIP	4PB4043-3877P1
23	CLUTCH A ASSEMBLY	4PB4043-3878P1
24	SPRING	4PB4043-3879P1
25	CLAW	4PB4043-3880P1
26	E-CLIP	4PB4043-3881P1
27	CLUTCH B	4PB4043-3882P1
28	RATCHET	4PB4043-3883P1
29	UNI-DIRECTION BEARING	4PB4043-3884P1
30	CLUTCH MECHANISM SHAFT	4PB4043-3885P1
41	SPRING	4PB4043-3886P1
42	TAPPING SCREW	4PB4043-3887P1
43	SCREW	4PB4043-3888P1
44	SCREW	4PB4043-3889P1
45	HOPPER SET SHAFT	4PB4043-3890P1
46	HOPPER SET GEAR	4PB4043-3891P1
47	E-CLIP	4PB4043-3977P1
48	REAR STACKER ASSY	4PB4043-3893P1
51	STACKER BOTTOM ASSY	4PB4043-3894P1
52	HOPPER BOTTOM	4PB4043-3895P1
53	NAME PLATE	4PB4043-3896P1
54	HOPPER ADJUST SHAFT	4PB4043-3897P1
55	E-CLIP	4PB4043-3898P1
56	SHAFT ASSY (HOPPER EJECT ROLLER)	4PB4043-3899P1
61	HOPPER UNIT (R)	4PB4043-3900P1

NR. NO.	BEZEICHNUNG PART NAME	BESTELL-NR. PART NO
62	HOPPER UNIT (R)	4PB4043-3901P1
71	PRESSURE PLATE ASSY (R)	4PB4043-3902P1
72	PRESSURE PLATE ASSY (L)	4PB4043-3903P1
73	O-RING	4PB4043-3904P1
74	BUSHING	4PB4043-3905P1
75	SPRING	4PB4043-3906P1
76	HOPPER SUPPORT	4PB4043-3907P1
77	PAPER SUPPLY ROLLER (R)	4PB4043-3908P1
78	PAPER SUPPLY ROLLER (L)	4PB4043-3909P1
79	FRONT SHEET COVER ASSY	4PB4043-3910P1
81	SET PLATE (R)	4PB4043-3911P1
82	BEARING	4PB4043-3912P1
83	E-CLIP	4PB4043-3913P1
84	HOPPER SET LEVER	4PB4043-3914P1
85	SCREW	4PB4043-3915P1
86	SIDE COVER (R)	4PB4043-3916P1
87	HOPPER WIRE	4PB4043-3917P1
88	REAR STACK WIRE	4PB4043-3918P1